
NET REFERENCE - RATCHET TOOL

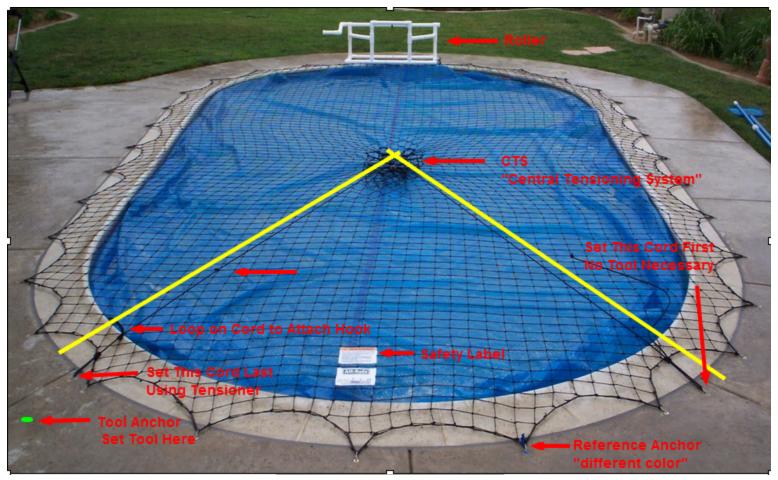

WARNING: your net pool cover does not replace adult supervision.

Ratchet Tool shown below

It is designed to act as a line of defense. Children should not be left unattended.

HELPFUL TIPS AND MAINTENANCE

Roller:

- Net roller must be positioned and anchored in the same place each time.
 There will be an anchor specifically for the roller located in one corner of the pool area.
- 2. As you roll up the net, make sure that it does not 'fall off the sides' of the roller. This will help prevent it from becoming tangled.
- 3. When rolling up the net, the roller should go clockwise for right handed cranks (counter-clockwise for left handed cranks). Make sure that the net passes through the square in the roller.
- Store your net in a location where: rodents or animals will not nest or damage the net; away from heat sources, pool heater, water heater, fire pit, BBQ, etc.

Loop Hi Cord Attach Hook Here As Shown Release Tool Handle

Application and removal tips:

- 1. Each net is custom made because every pool is shaped differently. Therefore, the tension on the net may vary at different areas due to the shape of the pool. Install clips located on turns first, then straight runs. The net must be replaced in exactly the same position each time. An anchor will be specially painted and clip marked with a different color twine to indicate the reference point so that you are sure to get the net aligned properly.
- 2. Net material is designed to contract, therefore the net will shrink as it sits off the pool, the longer its off, the more difficult it may be to apply the net. If the net is off the pool for more than a week, it may need to be adjusted by a service tech for a nominal service fee.
- 3. Clips may be able to be removed by a strong adult or older child without the use of the tool. The key is that a toddler or young child cannot remove the clips and that a supervising adult prevents the child from playing with the clips or on the net.
- 4. Jumping or playing on the net will cause premature damage to the net (fraying or broken strands). The net is an emergency safety device, premature wear from improper use can make the net fail when needed for an safety emergency.